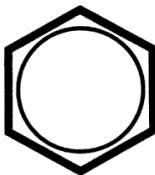
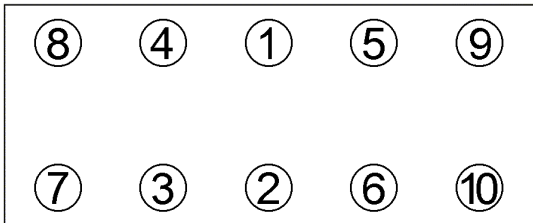


Anziehvorschrift für Zylinderkopf		352.072		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Renault Das Original		
 111.630 M 10x1,5x100		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 		
Anziehen/ Tightening/ Serrage/ Apriete	* 55 - 65 Nm ★ 20 min ● 150 min □ 55 - 65 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
77 mm Ø, 1,27/1,20 mm ÷				
R 5 Mot.847, C2J 1397 ccm 11/1979>1985				
R 5 Mot.C1J, C2J, C3J/700/702 10/1984>				
R 9, R11 Mot.C1J/715,C2J/717/720/730/756/768				
C3J/700/756 1397 ccm 09/1981>				
R 12 Mot.847.05/06/07 1397 ccm 1976>1980				
R 18 Mot.847.20/21, 857 1397 ccm 04/1978>				
Fuego Mot.847.20/21 1397 ccm 03/1980>1985				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*352.072*		